



PLUGGIT

Immer frische Luft

1. GENERAL INFORMATION

1.1. VALIDITY

This supplement sheet applies to item number 352412 and higher.


1.2. FUNCTION OF THE T2 TEMPERATURE SENSOR

The T2 temperature sensor monitors the supply air temperature. The fresh-air unit is automatically switched off and the error message **Error 08** appears on the display if the supply air temperature falls below 6 °C. The supply air temperature is queried every hour until it rises above 6 °C again. The fresh-air unit starts in the program previously active if the supply air temperature rises above 6 °C.

2. TEMPERATURE INDICATOR

2.1. QUERYING THE SUPPLY AIR TEMPERATURE


1. Press any key to activate the remote control. The standard display appears.

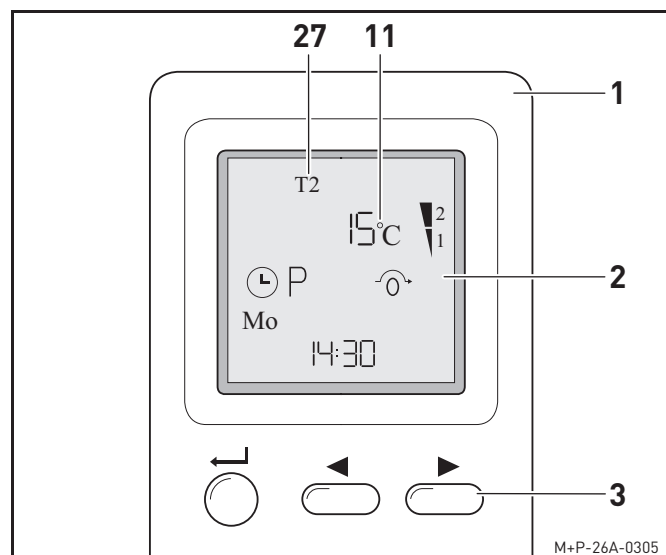

- 1 Remote control
 - 2 Display
 - 3 Move to the right in the menu
 - 11 Multifunction display
 - 27 Supply air temperature
2. Press the key ► repeatedly until T2 is selected. The supply air temperature is displayed.

3. TROUBLESHOOTING

3.1. ERROR MESSAGES

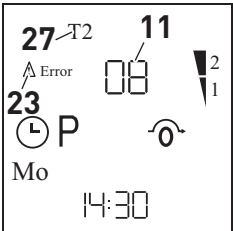Malfunction	
	<ul style="list-style-type: none"> • The fresh-air unit has switched off. • The T2 indicator flashes. • The Error indicator is lit up (23). • The error code 08 is displayed (11).
Cause	Remedy
The supply air temperature is below 6 °C.	<ul style="list-style-type: none"> • Wait an hour until the fresh-air unit goes on again.
The T2 temperature sensor is not working.	<ul style="list-style-type: none"> • Request customer service and check the temperature sensor and replace it if necessary.