



PLUGGIT

Immer frische Luft

1. REPLACING TEMPERATURE SENSORS


1.1. VALIDITY

This supplement sheet applies to item number 352412 and higher.

1.2. REPLACING TEMPERATURE SENSORS

Caution:

Disconnect the fresh-air unit from the mains supply before replacing the temperature sensors.

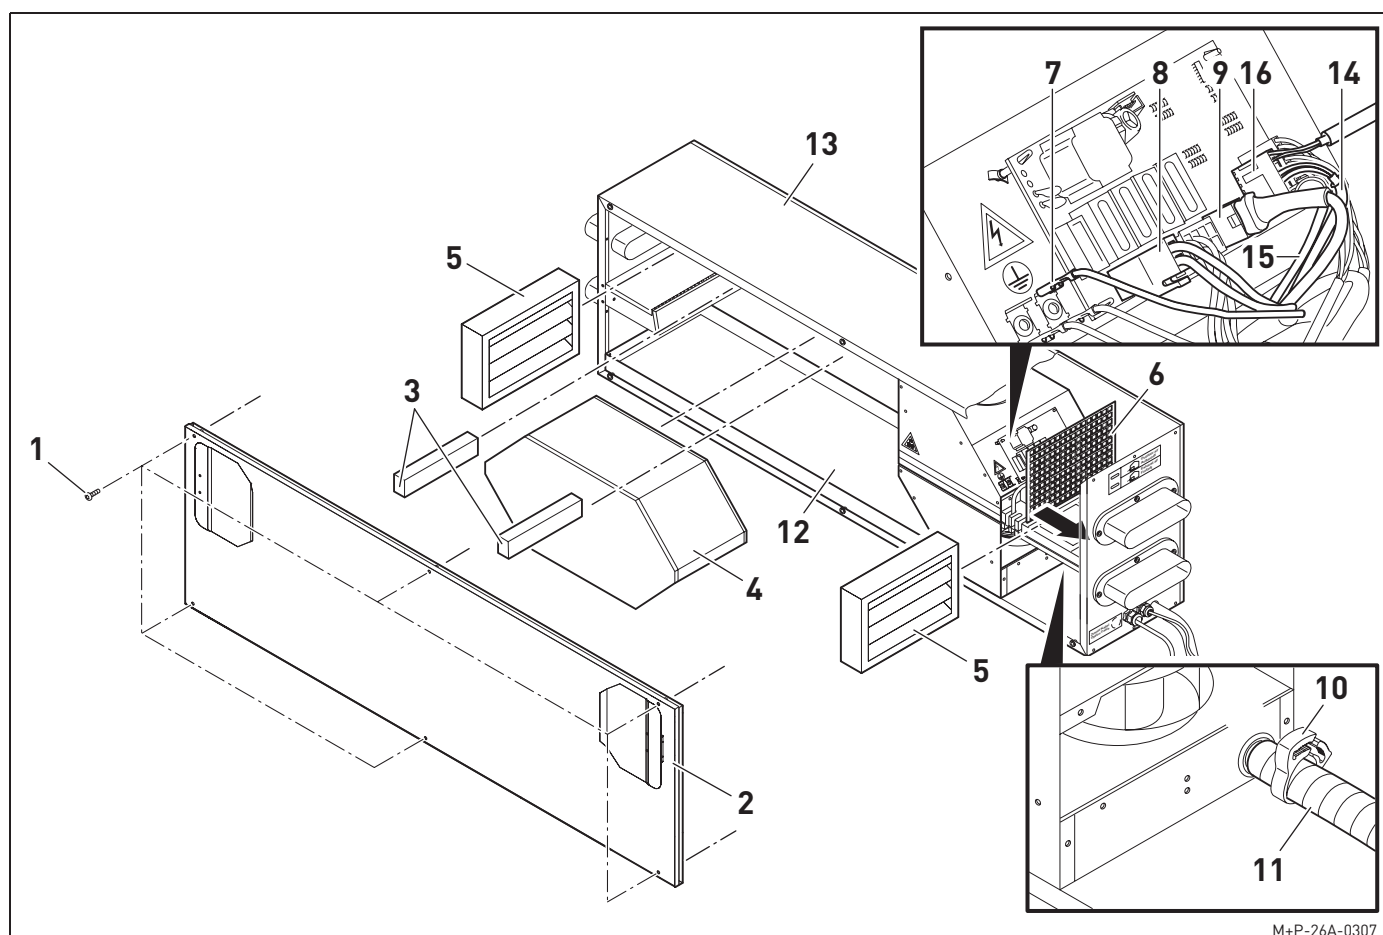

M+P-26A-0307

1. Unscrew the screws (1) and remove the cover (2).
2. Pull out the foam insulation pieces (3), raise the heat exchanger (4) and remove it.
3. Remove the filter (5).
4. Flap the protective grid (6) away.
5. Pull out the plugs (7), (8) and (9).
6. Remove the hose clip (10) and undo the condensate line (11).
7. Pull the entire fan module with condensate collector (12) out of the housing (13).
8. Remove the cable tie from the temperature sensor (14).
9. Undo the temperature sensor (14) on the underside of the condensate collector.
10. Pull out the temperature sensor (15) upwards.
11. Pull out the plug (16) and replace it.
12. The sensors are installed in the reverse order.